

# OMBEA ResponsePad™

## User Guide



## LED and button explanation



1. Answer button 1-10 / A-J.
2. Synchronization button.
3. Battery life indicator.
4. Ongoing synchronization indicator.
5. Indication received answer / not received answer.

## Synchronize

Synchronization is only necessary when two systems may interfere. All ResponsePads have the same factory default channels. When OMBEA Response is in synchronization mode, press the synchronization button (2) to synchronize the device. You start the synchronization mode by pressing *Configure*, selecting *Synchronization Mode* and pressing *Start*.

*Note: the synchronization is flashed and will not be resetted after change of battery.*

## Specifications

- Range: approximately 70m.
- Dimensions (mm): 82 x 49 x 8.
- Channels: 16.
- Battery life (approx.): 12 months.
- Response Received Confirmation.
- Battery Life Indicator.
- Battery: 1 pc. CR2450.
- Compliance Certifications: CE (EN 300 328, EN 300 328, EN 301 489, EN 60950-1, EN 55022, EN 55024).

- Certifieringar: CE (EN 300 328, EN 300 328, EN 301 489, EN 60950-1, EN 55022, EN 55024).

## Changing the battery

To change the battery, remove the screw that holds the battery cover with a suitable screwdriver, for example, PH-0, remove the old battery and replace it with:

**CR2450 (not CR2450N)**

The battery anode (+) should be facing upwards.

If you are unsure of the installation or require a large number of batteries, contact OMBEA support.



## Disposal of old electric and electronic equipment

Electronic equipment and batteries should not be disposed with the household waste but left at an appropriate collection point for recycling. Check local regulations by contacting your local authorities, local recycling center or contact OMBEA support.